

## DISCLAIMER

By installing this product, you agree to full terms and specifications as contained in the User Manual.

Even if made in a professional workshop, the installation is at your own risk and LM Corse is not responsible in any way for any damage related to your car during this operation.

The installation does not require the use of cutting or dangerous tools, but does involve interaction and proximity with batteries and electronic equipment. Always be sure to operate in a safe way.

We recommend to use this product only on racetracks or private properties. LM Corse is not responsible in any way for any damage caused to people or properties, including third parties, for improper use of the device.

The user is totally responsible for the data entered during the first setup.



### WARNING:

Entering numerical values other than those reported on your original cluster may be considered illegal in some Countries.



#### HEADQUARTER:

Via Palestrina, 2  
20124 Milano  
ITALY

#### SHOWROOM:

Via Roma, 81/83  
22060 Cabiato (Co)  
ITALY

#### DOWNLOAD USER MANUAL



CORSE

LM DASH

## INSTALLATION GUIDE

## SPECIFICATIONS

### DISPLAY FEATURES:

	Data	Description
Display	65K - 65535 col.	16 bit 565 - 5R-6G-5B
Backlight		LED
Backlight lifetime		> 30.000 h
Brightness	300 nit.	10% - 100% (step 10%)

### WORKING ENVIRONMENT:

	Min	Norm	Max	
Working temp. [12 V - hum. 60%]	-20	25	70	°C
Storage temp.	-30	25	85	°C
Working humidity [25 °C]	10	60	90	% RH

### ELECTRONIC PARAMETERS:

	Min	Norm	Max	
Operating voltage	10	12	14	V
Operating current * [No external devices]	-	530	-	mA

\* The device doesn't absorb any current when the vehicle is off.

## TROUBLESHOOTING

*If the battery is malfunctioning or voltage is too low, there could be problems in turning on the dashboard.*

#### SOLUTION:

Check the charge level of your battery.

*If battery voltage is too low or starter current consumption is too high, the dashboard may freeze on the startup screen or continuously reboot.*

#### SOLUTION:

Wait for a few seconds, then the emergency procedure will start and the dashboard will automatically turn on Progressive theme. If not, press the internal reset button using the little hole on the left of front side.

*In case of high current absorption, the internal self-resetting fuse will shut down the dashboard.*

#### SOLUTION:

If there are no persistent problems, just wait a few minutes and the full dashboard functioning will be restored.

*If handbrake light is malfunctioning you won't be able to enter Setup menu.*

#### SOLUTION:

The operation can be completed by quickly pressing the letter "S" in the "LM Corse" logo appearing on the startup screen.

*If you install a wrong model year dashboard, the device won't turn on and could damage your car.*

#### SOLUTION:


Check if you have purchased the right version for your car.

# QUICK INSTALLATION


- Turn ON the original dashboard.
- Write down your total km or miles.
- Turn OFF the original dashboard.
- Disconnect car battery.
- Remove the original dashboard.
- Plug the original Lotus connector into LM Dash.  
[Only for MY-04, also plug in the CAN BUS connector]
- Connect any optional device to LM BUS connector.
- Fix LM Dash on the original frame and mount it back in the original place.
- Connect car battery.
- Turn the key to position I and power ON your new LM Dash.
- Accept Terms of Use.
- Choose your units: metric (km/h) or imperial (mph)
- Insert the same value of total km or miles as reported on your original dashboard.
- Set the current time and date.
- Press SAVE AND EXIT.

**ENJOY YOUR TRIP!**


## MY-04

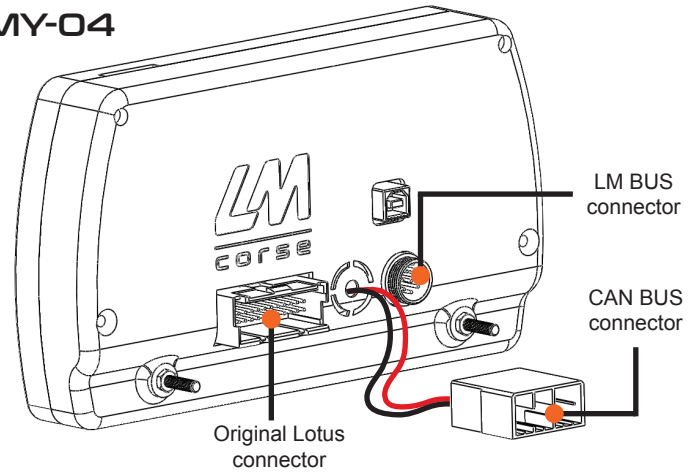

## MY-08/11

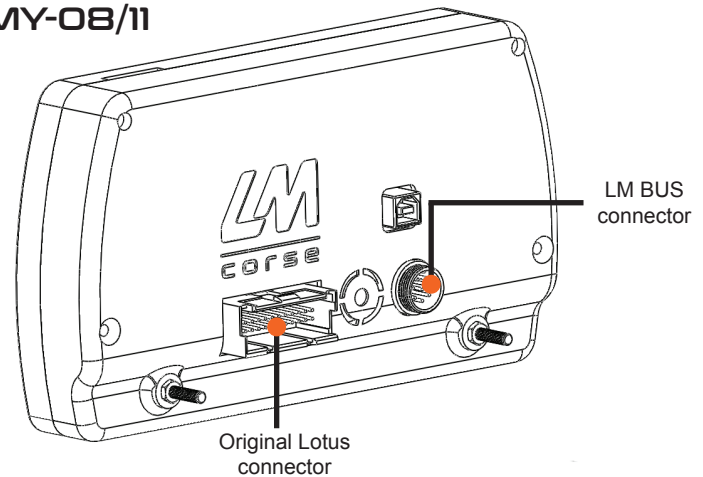

# SETUP MENU

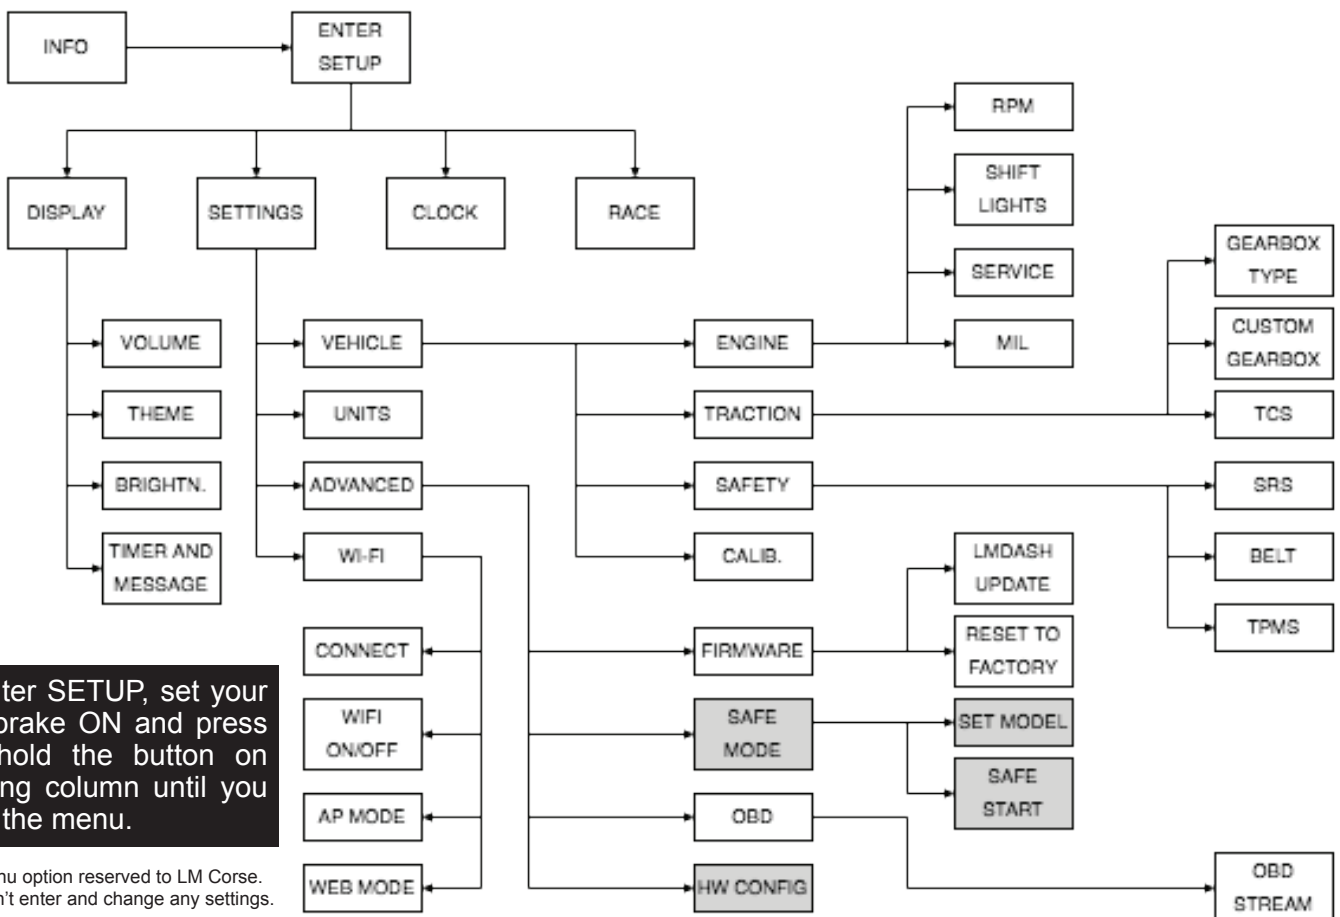

To enter SETUP, set your handbrake ON and press and hold the button on steering column until you enter the menu.

Menu option reserved to LM Corse. Don't enter and change any settings.